



# Sony DSC-RX100MA Back Cover Replacement

This guide will show you how to replace the back assembly of the camera.

Written By: KC Egger



## INTRODUCTION

Need to clean the inside of the camera? Start by taking off the back cover.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



- Remove battery by sliding the tab to open the cover

## Step 2



- Using the screwdriver, remove all screws (black 2.5mm) from outermost layer of the assembly.

**i** All screws in the camera can be removed with the PH 0 driver head.




## Step 3



- Also using the screwdriver, remove screws (black 2.5mm) underneath articulated LCD screen.
- Remove the marked 1 mm screws with the screwdriver

## Step 4

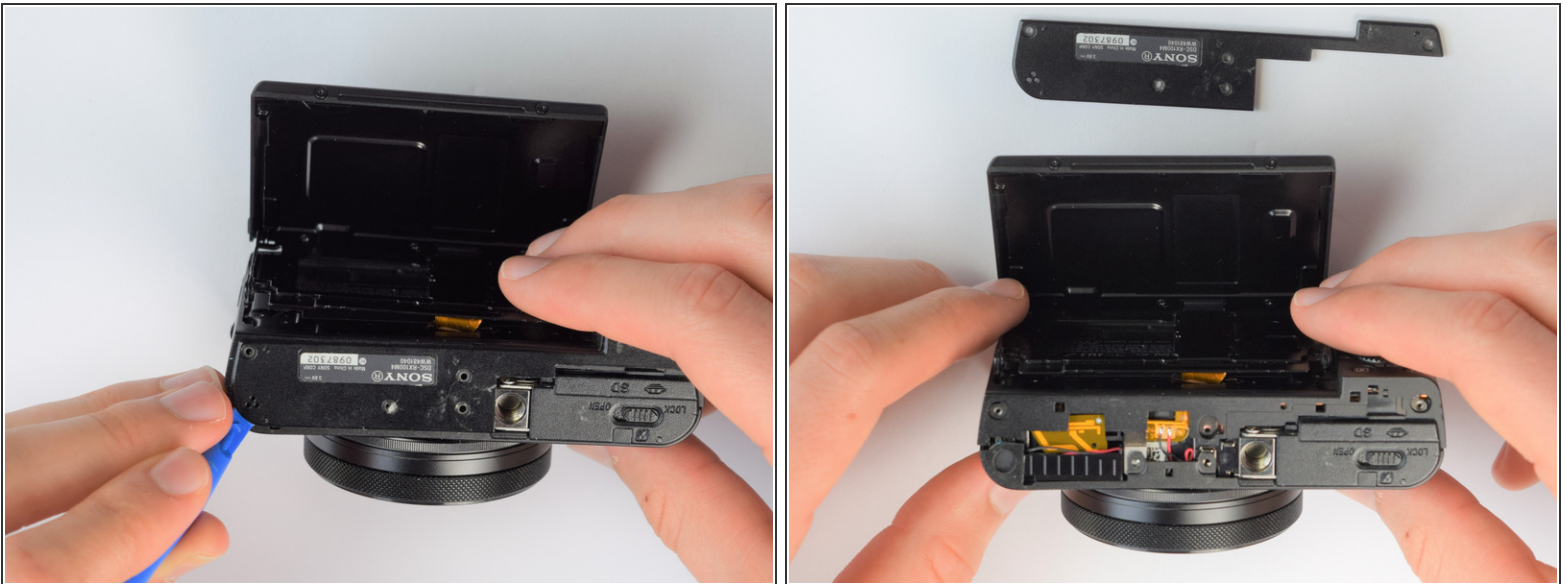

- Using the plastic opening tools, carefully pry off the bottom plate.


⚠ Do not pull too hard as you may break the plastic casing.

## Step 5



- Using the same plastic opening tools, separate the screen and back assembly from the front portion of the camera
- Once the back assembly is slightly detached, pull the media covers for the HDMI and Multimedia ports

## Step 6

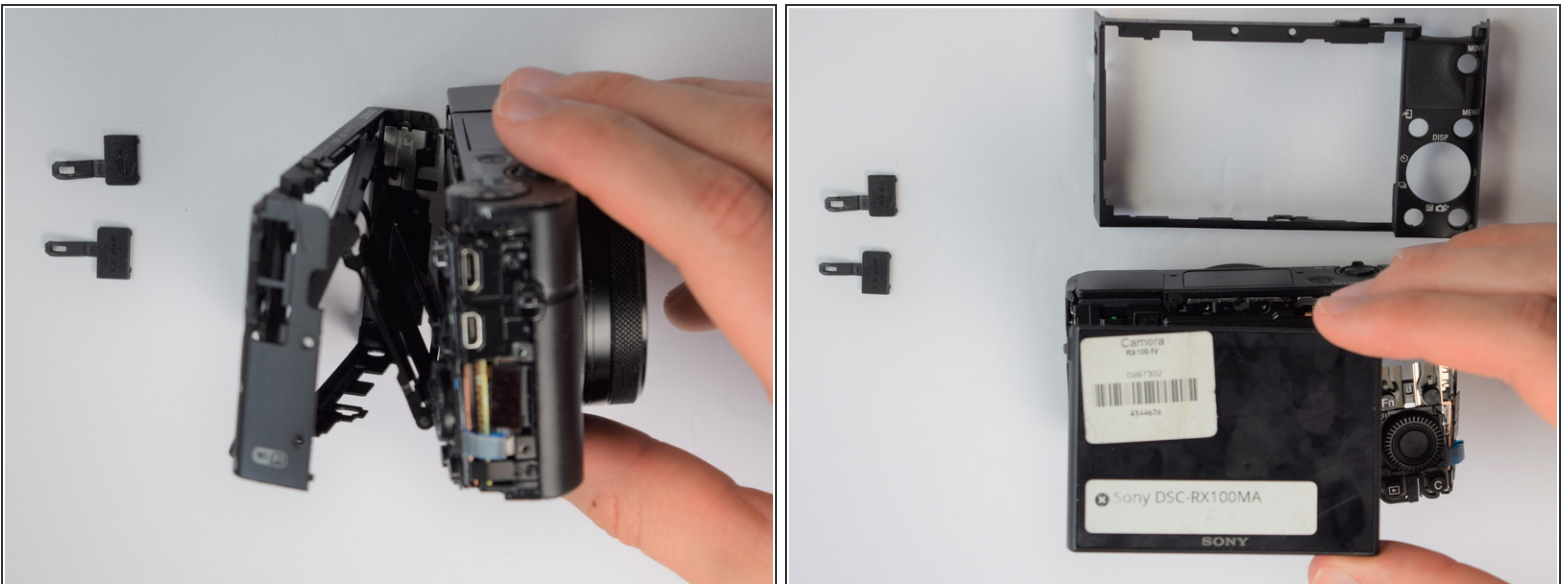

- Remove the back cover

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 01:57:43 AM.